




## Premier Mace Owners Guide

Thank you for choosing the Premier Mace. These instructions will provide the necessary information for you to fit the Chain or Cord to your Mace.

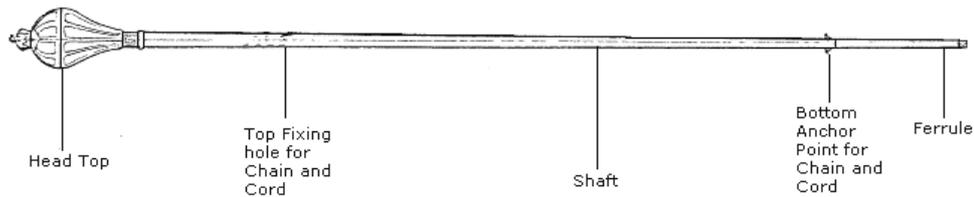

 
### Fitting of Cord

Take your Cord and apply a thin sticky tape (not supplied) around either end of the length of the Cord to form tags (like a shoe lace).

Pass one taped end through the top hole in the shaft so that equal amounts of the Cord are showing either side.

Pull the Cord tight and plait around the Mace - 6 plaits either side for a 60" Mace and 4 per side for a 54" Mace.

#### *60" Mace with 6 Plaits*




#### *54" Mace with 4 Plaits*



Pull the Cord tight again then thread the two ends through the two anchor points then attach the two tassels to either end of the cord.

Thread the Cord through the top of the holes within the tassels, then secure with a neat non slip knot, once you are happy with the length and tension of your Cord, cut the remaining lengths that are showing from the end of the knots, these cut ends can then be taped up to prevent the Cord from fraying.

## Fitting of Chain

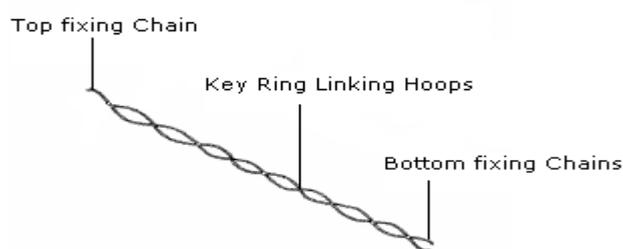

Before you start please note, if you are attaching a Chain to a 54" Mace then you will need to remove the top two loops including the two key ring linking hoops from the Chain, but remember to reattach the top fixing length of Chain to the top of the Chain assembly.

Firstly slide the first loop of your Chain onto the bottom of the Mace, continue this process with each loop making sure you alternate the key ring style hoops between the front and back of the shaft until you have threaded the whole of the Chain onto the shaft.

Once these have all been placed around the shaft, attach the bottom two fixing Chains onto the two anchor hooks located just above the ferrule. To do this use a small pair of pliers to gently open up the anchor rings, then once the Chain is attached bend back the loops to keep the Chain in place.

To secure the top of the Chain, thread the single fixing length through the top hole and then attach it to the first small key ring loop at the top of the Chain assembly, making sure the Chain is lying perfectly flat against the shaft and is not twisted.

### *60" Mace with Chain*



### *54" Mace with Chain*



If your Chain is too loose, using some small metal cutters, remove some of the links from the top or bottom fixing Chain. Be careful not to cut off too many from one end, it is advised to cut off only a couple of links at a time and to alternate between top and bottom until your desired length is achieved.

**Premier**

Premier Music International Limited  
Kibworth Business Park, Kibworth Harcourt, Leicestershire LE8 0EX UK  
Tel: +44 (0)870 160 3121 Fax: +44(0)870 160 3122  
Email: [info@premier-percussion.com](mailto:info@premier-percussion.com)